

User Manual

AVS240WS, AVS240KS, AVS320KS, AVS325KS

English......**10**



Thank you for choosing AVEL TV! Before using and installing the product, please read this guide.

Please keep this manual for future reference.

The informtaion in this manual is subject to change without prior notice.



Warnings

To reduce the risk of fire, electric shock and other injuries, keep these safety precautions in mind when installing, using and maintaining your TV. The mains outlet should be installed near the equipment, be easily accessible. The TV should be connected to a grounded GFCI protected mains outlet.


- To protect against electric shock, do not immerse the power cord, power plug or product in water or other liquid.
- Do not overload AC outlets or extension cords. Overloading can cause a fire.
- Close supervision by adults is necessary when a product is used by or near children.
- Do not operate the product with a damaged cord or plug or if it has been damaged in any manner.
- Do not let the power cord get in contact with hot surfaces.
- If you notice any smoke or scorched smell near the product, unplug the power cord and contact qualified personnel for service or repair.
- Do not use or place any combustible or flammable substances near the product.
- Do not use this product for other than intended use.
- This product is intended for indoor use only.
- For added safety, during a light storm, or when this product is left unattended and unused for a long time, unplug it from the wall outlet and disconnect the antenna.
- Do not use detergents containing abrasives.

Accessories




Please make sure that the accessories are in the package as shown below:

- 1. Mounting bolts set x 2 pcs.
- 2. Retaining clips x 4 pcs.
- 3. Velcro x 2 pcs.
- 4. Silicone damper x 2 pcs.
- 5. Installation manual x 1pcs.
- 6. Installation drawing x 1 pcs.
- 7. Prior to First Use x 1 pcs.
- 8. Remote control x 2 pcs.
- 9. Waterproof remote control holder x 1 pcs.
- 10. Mini jack 3.5mm to AV RCA converter cable x 1 pcs.

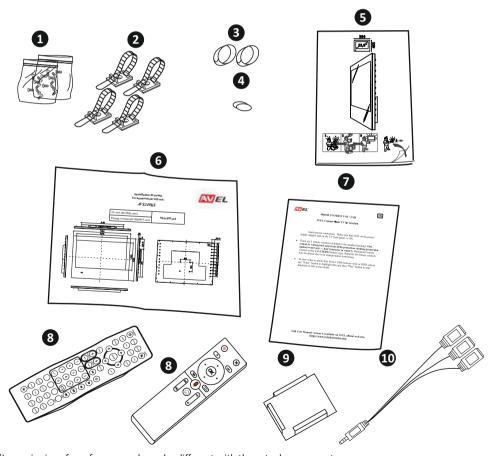


*Image is given for reference and may be different with the actual components

Remote control

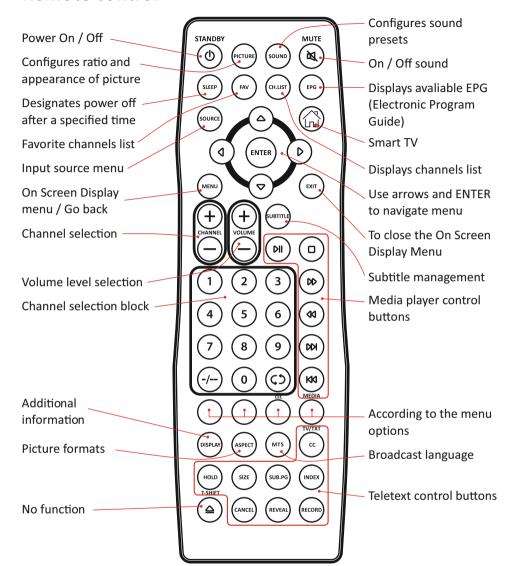


Battery replacement Battery type CR2032

Remote control for Smart TV

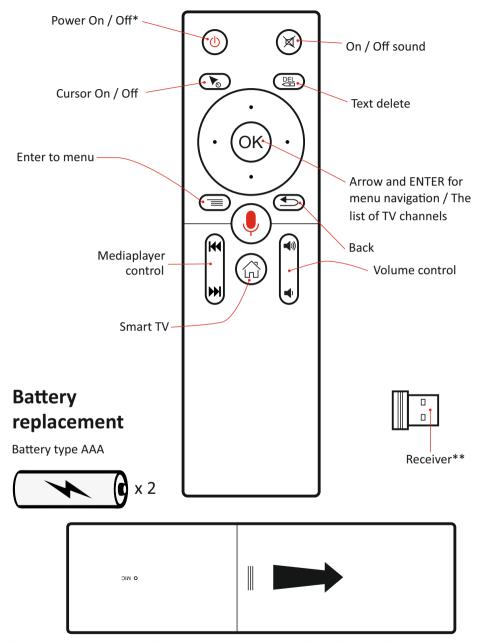

^{*} You can teach the Power button from the original remote control. 1) Hold the Power button for 3 sec (you can see the red blinking indication on the smart remote). 2) Line up smart remote and original remote head-to-head. 3) Push a button on the original remote.

^{**}Before using remote control, connect the receiver to USB port of TV.

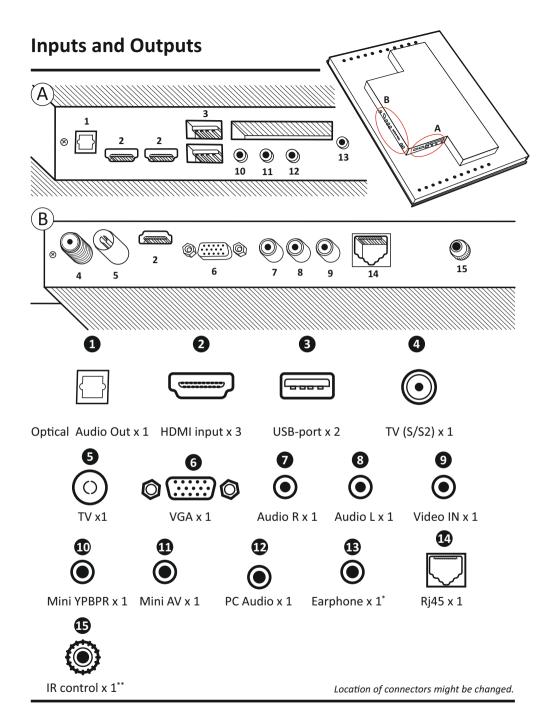

*For external Earphones.

^{**}For external IR receiver or IR pass through connection.

Settings



Input Source selection

- 1. Press SOURCE button
- 2 . Use arrows to choose the desired input
- 3 . Press ENTER to confirm selection
- 4 . Use EXIT button to close menu.



Image settings

It is used for tuning of the brightness, color, noise reduction and the color temperature.



Time settings

It is used for tuning of date, time, sleep timer and auto standby.



TV tuner settings

It is used for tuning of digital and analog TV channels and editing. LCN – Logical Channel Number.



Sound settings

It is used for tuning of equalizer, automatic volume control and surround effect.



Menu settings

It contains language settings, reset function.


HDMI CEC – for control external device by HDMI.



Parental menu


Offers options to restrict program and set access password.

SMART TV

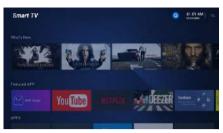

Start Smart TV

To start Smart TV push the button on the RC.

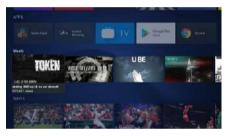

Application installation

You can use Google Play Market to install free or paid applications and games. You should have a Google account to log in.



AirPlay and Miracast

For Apple devices connection please use iMirror, for Android devices connection please use Screen Mirroring.



Settings

You can connect to Wi-Fi, change the language, application settings, keyboard, date and time, search etc.




Return to TV mode

To return to TV mode go to "Source" and choose the desired input.



Bluetooth

For wireless devices connection please go to "Remotes & Accessories" in the Smart settings. You can connect wireless speakers, headphones, BT air mouses, gamepad etc.

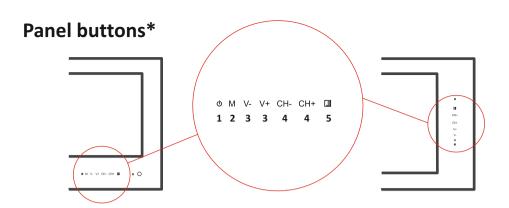

- 1 Power On/Off
- 4 Channel selection**
- 2 On Screen Display menu** 5 Input/source menu**
- 3 Volume level selection**

Troubleshooting



Symptoms

Blank screen



Possible Solution

Check the LED indicator. If the LED indicator is red. the TV is in standby. If the LED indicator is green, try to change input/source. If the LED indicator is black, check the power connection.

Remote control doesn't work



Point the remote control to the TV and press power button on the remote control. If the status LED becomes green, remote control is OK. If not, replace the batteries of the remote control.

^{**} Not available in Smart mode



AVIS ELECTRONICS OVERSEAS LIMITED

 $\label{lem:manufacturer: 506-507A, HuiGu ChuangXin Technology park, JingBei road, Shiyan town , Baoan district, Shenzhen, Guangdong, China, 518108$

For more details, please visit www.aviselectronics.tech

Manufacturer's legal address: 506-507A, HuiGu ChuangXin Technology park, JingBei road, Shiyan town ,Baoan district, Shenzhen, Guangdong, China, 518108

Importer: ILVIPL Sp.z.o.o

Adres prawny importera: 50-541 Wrocław, Aleja Armii Krajowej, 45

Więcej informacji na stronie www.aviselectronics.pl

