

User Manual

Series SM (4K)

English. 2

Thank you for choosing AVEL TV! Before using and installing the product, please read this guide.

Please keep this manual for future reference.

The information in this manual is subject to change without prior notice.

 


Warnings

To reduce the risk of fire, electric shock and other injuries, keep these safety precautions in mind when installing, using and maintaining your TV. The mains outlet should be installed near the equipment, be easily accessible. The TV should be connected to a grounded GFCI protected mains outlet.










- To protect against electric shock, do not immerse the power cord, power plug or product in water or other liquid.
- Do not overload AC outlets or extension cords. Overloading can cause a fire.
- Close supervision by adults is necessary when a product is used by or near children.
- Do not operate the product with a damaged cord or plug or if it has been damaged in any manner.
- Do not let the power cord get in contact with hot surfaces.
- If you notice any smoke or scorched smell near the product, unplug the power cord and contact qualified personnel for service or repair.
- Do not use or place any combustible or flammable substances near the product.
- Do not use this product for other than intended use.
- This product is intended for indoor use only.
- For added safety, during a light storm, or when this product is left unattended and unused for a long time, unplug it from the wall outlet and disconnect the antenna.
- Do not use detergents containing abrasives.

Accessories

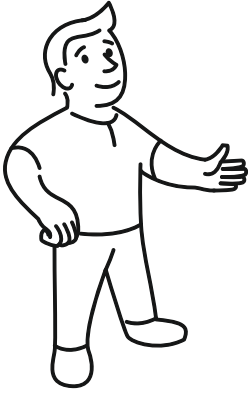

         Please make sure that the accessories are in the package as shown below:

1. Mounting back box x 1 pcs.
2. Mounting bolts set x 1 pcs.
3. Installation manual x 1 pcs.
4. Installation drawing x 1 pcs.
5. Prior to First Use x 1 pcs.
6. Remote control x 1 pcs.**
7. Power cable x 1 pcs.
8. Power adapter x 1 pcs.***
9. Waterproof remote control holder x 1 pcs.
10. Mini jack 3.5mm to AV RCA converter cable x 1 pcs.

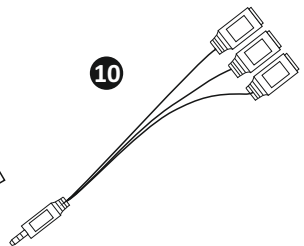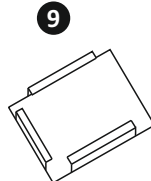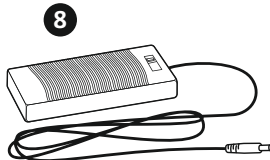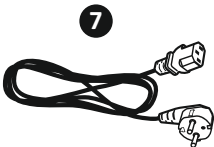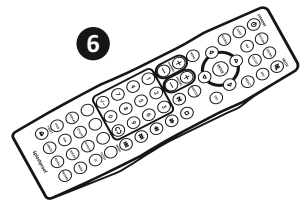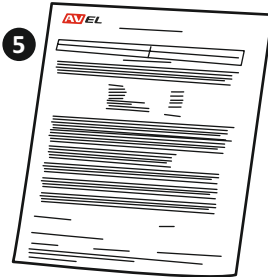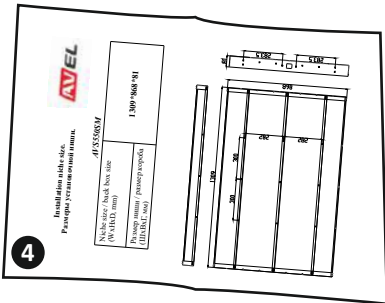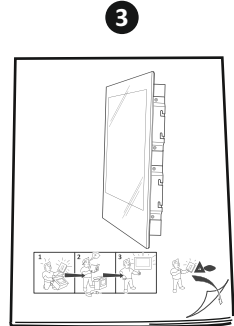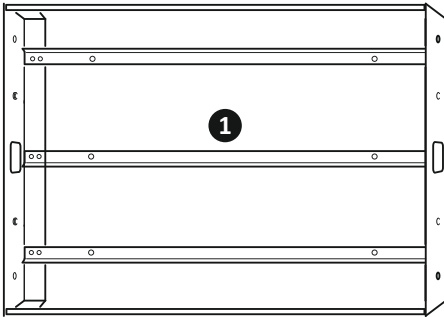 


*Image is given for reference and may be different with the actual components.

** The TV can be equipped with a second premium remote control (option).

 
*** Only AVS430SM, AVS490SM, AVS550SM.

Remote control

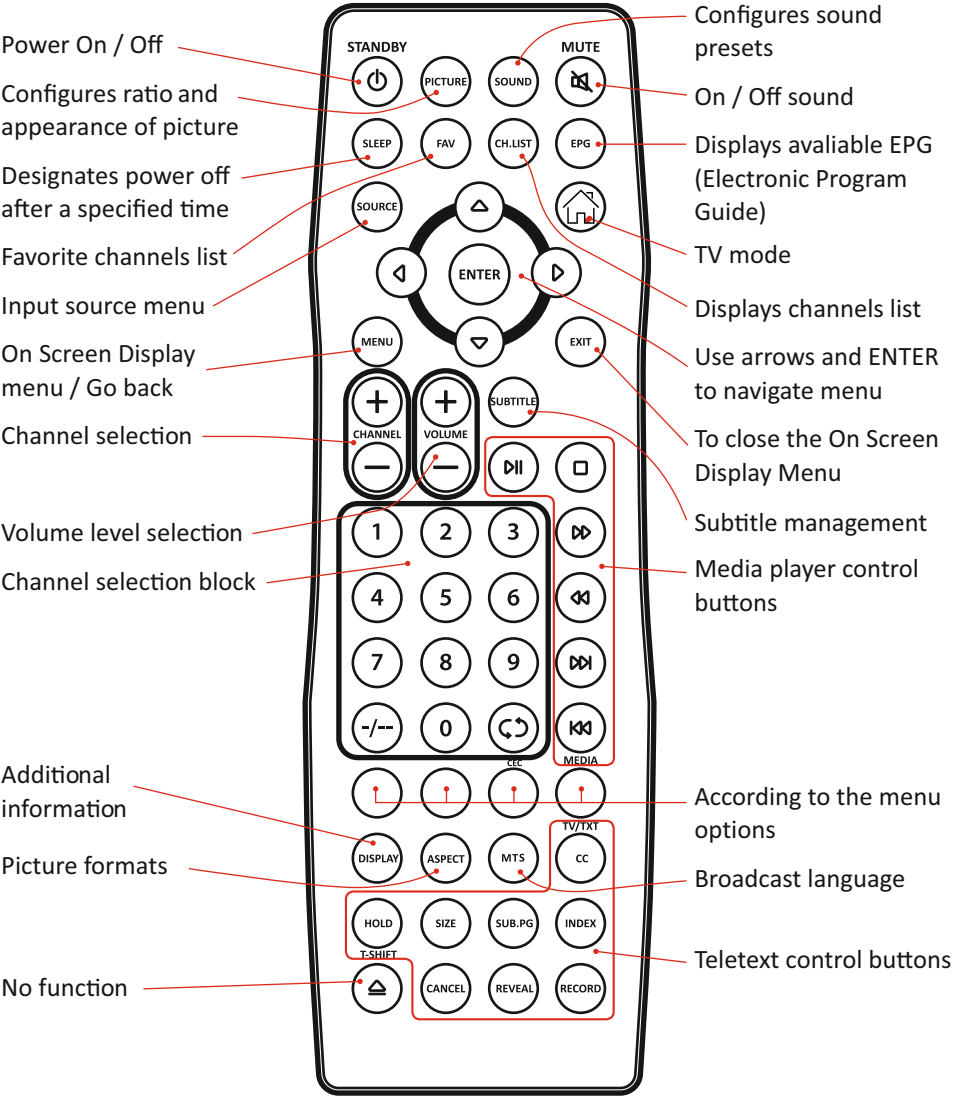



Battery replacement

Battery type CR2032

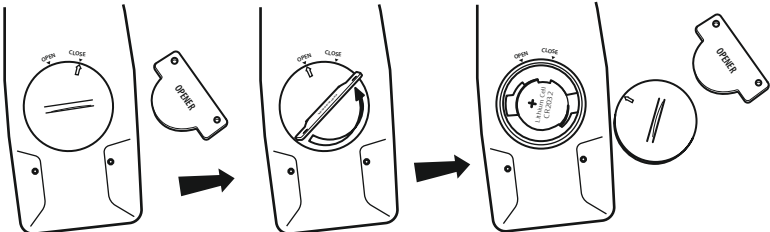

Inputs and Outputs

 
 
AVS430SM, AVS490SM, AVS550SM

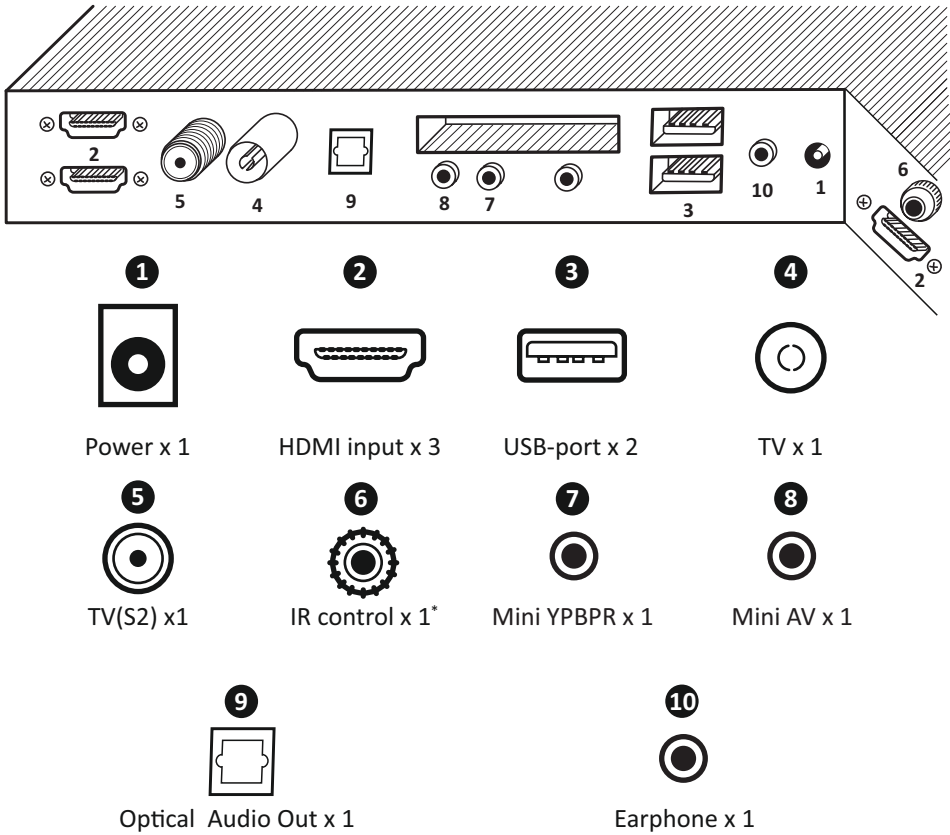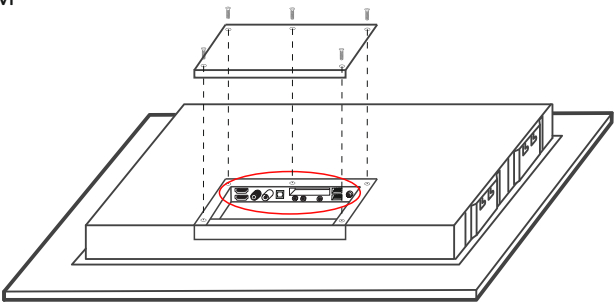

* For external IR receiver or IR pass through connecton.



Inputs and Outputs

  AVS650SM, AVS750SM

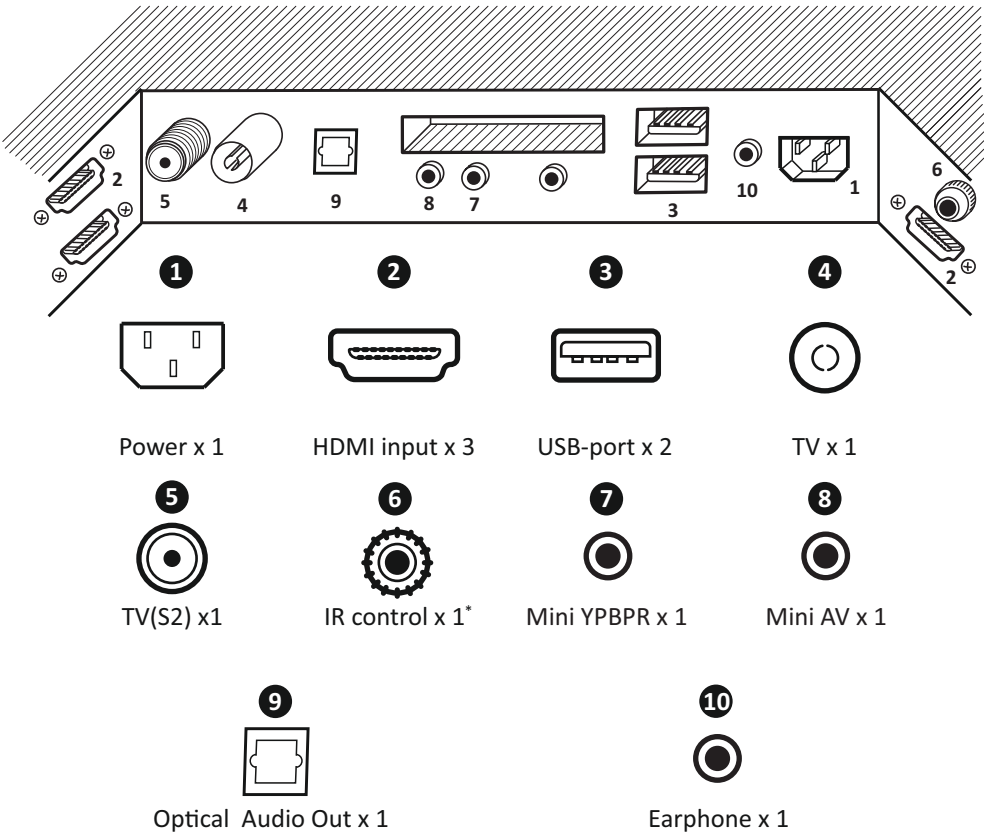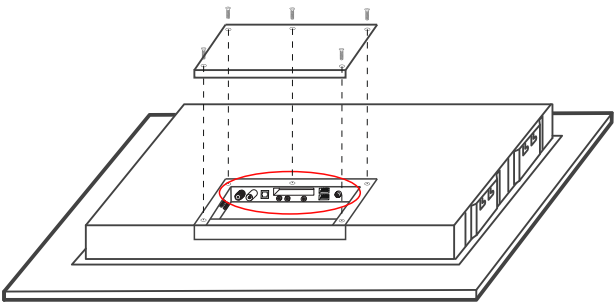

* For external IR receiver or IR pass through connecton.

  Settings

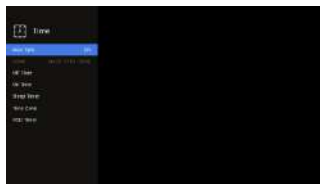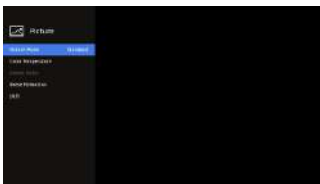

Input Source selection


 
- 1 . Press SOURCE button
- 2 . Use arrows to choose the desired input
- 3 . Press ENTER to confirm selection
- 4 . Use EXIT button to close menu.

Image settings

It is used for tuning of the brightness, color, noise reduction and the color temperature.

Time settings

 It is used for tuning of date, time, sleep timer and auto standby.

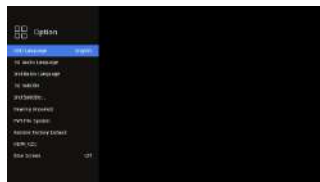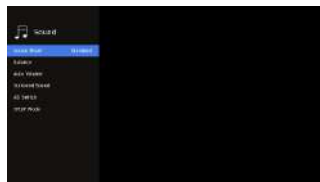

TV tuner settings

It is used for tuning of digital and analog TV channels and editing.

Sound settings

It is used for tuning of equalizer, automatic volume control and surround effect.

Menu settings

 
It contains language settings,
reset function.
HDMI CEC – for control
external device by HDMI.



Parental menu

Offers options to restrict program and set access password.

Panel buttons*

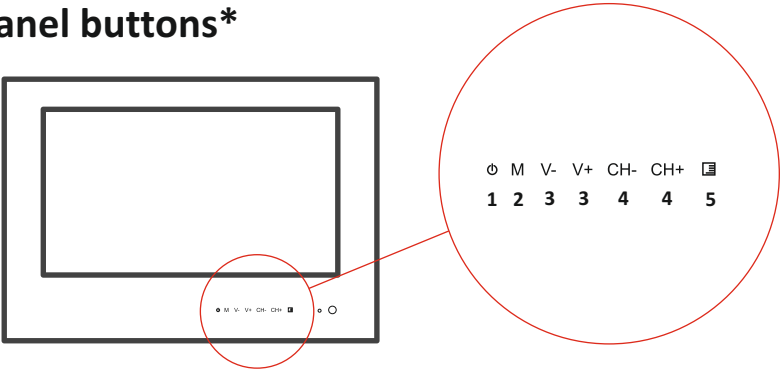

- ❶

Power On/Off
- ❷

 
On Screen Display menu
- ❸

Volume level selection
- ❹

Channel selection
- ❺

Input source menu

Troubleshooting

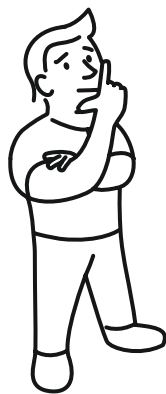

Symptoms

 
Blank screen



Possible Solution

Check the LED indicator. If the LED indicator is red, the TV is in standby. If the LED indicator is green, try to change input/source. If the LED indicator is black, check the power connection and LED indicator at power adapter.

Remote control doesn't work



Point the remote control to the TV and press power button on the remote control. If the status LED becomes green, remote control is OK. If not, replace the batteries of the remote control.

* Option, not available for Mirror TVs.



AVIS ELECTRONICS OVERSEAS LIMITED

Manufacturer: 506-507A, HuiGu ChuangXin Technology park, JingBei road, Shiyan town , Baoan district, Shenzhen, Guangdong, China, 518108

For more details, please visit **www.aviselectronics.com**

Manufacturer's legal address: 506-507A, HuiGu ChuangXin Technology park, JingBei road, Shiyan town , Baoan district, Shenzhen, Guangdong, China, 518108

Importer: ILVIPL Sp.z.o.o

Adres prawny importera: 50-541 Wrocław, Aleja Armii Krajowej, 45

Więcej informacji na stronie **www.aviselectronics.pl**

Made in China | Wyprodukowano w Chinach

